


# Instructions for Multi-loading Grease Gun

Follow These Steps Carefully Before Using This Gun.

## How to load a cartridge in your Grease Gun.

**Step 1: Unscrew the head from the barrel**

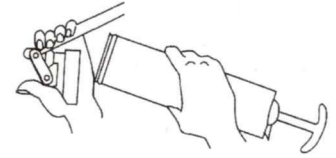

Step 1


**Step 2: Pull back the rod handle and lock into position.**

**a.) Push-Lock Style:**

Pull the rod handle through the housing and pull into the slotted end cap.

**b.) Stopper Style:**



Pull back the rod handle to automatically lock the rod by stopper in the position.

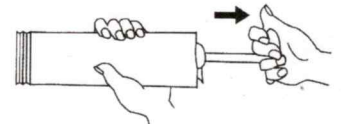

Step 2


**Step 3: Remove the plastic cap from the end of grease cartridge, and insert the open end first into the barrel.**

**Loading ways:**

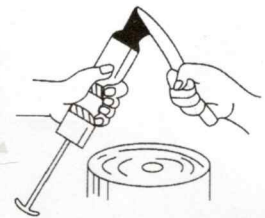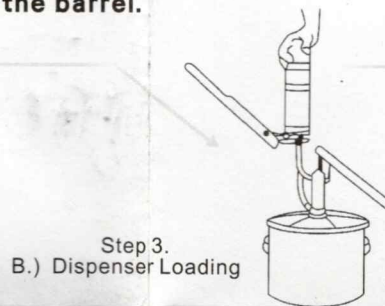

Step 3. C.) Bulk Loading

**Step 4: Screw head back onto the barrel**

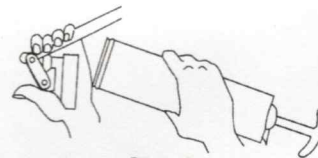

Step 4

**Step 5: Unlock the rod handle from the end cap.**


(If the rod handle is hard to release back from the end cap, slightly loosen the gun head 1-3 turns)

**a.) Push-Lock Style:**

Release the rod handle from the slotted end cap, and push down the rod handle into the barrel.

**b.) Stopper style:**

Press the stopper to release rod handle from end cap, and at the same time push down the rod handle into the barrel.

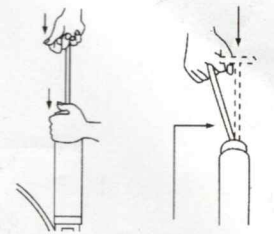

Step 5(b)

Step 5(a)

**Step 6: Unscrew gun head 1-3 turns and pump the lever handle around 6-8 times until grease comes out. This releases air pockets from barrel and makes it easy to pump the grease.**



Step 6

**Step 7: Screw the gun head tightly and ready for priming.**



Step 7

## Trouble shooting :

- **Problem :** Gun not pumping grease.
- **Possible causes:** Air pocket between in the tube and gun head, or between in the gun head and spout.
- **Solution:** 1. Take off spout from gun head.  
2. Unscrew container tube 1-3 turns from gun head.  
3. Pump the lever handle around 6-8 times until grease comes out.  
4. Screw the gun head tightly and ready for priming.