

# Simple Fuel Transfer Pump Kit

## User's Manual



**WARNING:** Read carefully and understand all **INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

### Model No.

10307000, 10305610, 10305611, 10305612, 10307201, 10307005, 10305617, 10305618, 10305619,  
10307207

10307007, 10305629, 10305630, 10306604, 10308204, 10307008, 10305631, 10305632, 10306605,  
10308205

# A. DECLARATION OF CONFORMITY

## DECLARATION OF CONFORMITY

### IN ACCORDANCE WITH THE DIRECTIVES:

89/392/CEE - 91/368/CEE - 93/44/CEE – 89/336/CEE – 92/31/CEE

### THE MANUFACTURER:

INTRADIN (SHANGHAI) MACHINERY  
118 DUHUI ROAD, MINHANG DISTRICT, SHANGHAI, 201109 CHINA

DECLARES THAT THE FOLLOWING PUMP MODELS:

**Model No. 10307000, 10305610, 10305611, 10305612, 10307201, 10307005, 10305617, 10305618, 10305619, 10307207, 10307007, 10305629, 10305630, 10306604, 10308204, 10307008, 10305631, 10305632, 10306605, 10308205**

To which this declaration refers, conform to the following applicable regulations:

#### EUROPEAN REGULATIONS:

EN292-1-92 – Safety of Machinery – General Concepts, basic principles for design – terminology, basic methodology

EN292-2-92 – Safety of Machinery – General Concepts, basic principles for design – specifications and technical principles

EN294-93 – Safety of Machinery – safe distances to prevent the operator's upper limbs from reaching dangerous areas

EN60034-1-2000 – Rotating electrical Machinery – nominal and functional specifications

EN60034-5-2001 – Classification of grades of protection for the housings of rotating electrical machinery

EN61000-6-3 – Electro – magnetic compatibility – generic emission standards

EN61000-6-1 – Electro – magnetic compatibility – generic immunity standards

EN55014-1-00(A1/99-A2/99) limits and methods for measuring radio disturbance characteristics

EN55014-2-97 – Electrical motor – operated and thermal appliances for household and similar purposes, electric tools and similar electrical apparatus

EN60204-1-98 – safety of machinery – electrical equipment of machines

## B. INTRODUCTION

The diesel transfer pump kit has been designed for the delivery of fuel from the drum & tanks in any situation. This manual, apart from giving all necessary information on ordinary maintenance and supporting engineers in failure detection and repair, should also give all the information's needed to fully employ the capacity of the machine, as well as to the user's needs.

### INSTALLATION

Electric connection should be done on a CEI standard socket provided with switch (so it isn't live when the connection is done) according to L.46/90 prescriptions.

## PRELIMINARY INSPECTIONS

Before the power connection is done, verify the conductors aren't live and general switches are off.

## DISMANTLING AND DISPOSAL PROCEDURE

The metallic parts which the machine is mainly made of will be dismantled and sent to the steel mills. The fuels in the tanks of the installation will be collected and sent to an authorized disposer. All plastic and non-degradable material parts will be separately collected and sent to an authorized disposer or recycled.

## SAFETY DEVICES

- **General Switch**

It is placed on the motor body and allows the operator to set it on standby in a very short time. Once the machine is stopped, the whole starting procedure can be repeated.

- **Harmful Functions**

The noise from the machine is below 70 dB (A).

- **HARMFUL EMISSIONS**

Steam emission is so reduced to result irrelevant.

- **FIRE PREVENTION**

In case of fire never use water, but extinguishing powders charged with CO2 cat. A-B-C-D only, employing the extinguishers placed next to the machine. Combustion of paints and plastic parts may produce toxic emissions: use the normal precautions to be employed in case of fire (always refer to the security supervisor of the place of installation).

- **FOR DC PUMP ONLY**

### ATTENTION!

Extreme operating conditions with working cycles longer than 30 minutes can cause the motor temperature to rise, thus damaging the motor itself.

Each 30-minute working cycle should always be followed by a 30-minute power-off cooling phase.

**NOTICE: THE VISION IS BUILT PAYING MAXIMUM CARE TO USER'S AND MAINTENANCE ENGINEER'S SECURITY.**

## C. TECHNICAL DATA

### C.1 Europe

PUMP MODEL	METER MODEL	Flow Rate	ELECTRICAL POWER			POWER
			Current	Voltage(V)	Frequency	Nominal (Watt)
10307000	Not Available	35/70LPM	DC	12/24	\	420
10305610	Not Available	56LPM	DC	12	\	300
10305611	Not Available	56LPM	DC	24	\	300
10305612	15111200	56LPM	AC	230	50	370
10307201	15111200	72LPM	AC	230	50	450
10307005	15111200	70LPM	DC	12/24	\	420

10305617	15111200	56LPM	DC	12	\	300
10305618	15111200	56LPM	DC	24	\	300
10305619	Not Available	56LPM	AC	230	50	370
10307207	Not Available	72LPM	AC	230	50	450

## C.2 America

PUMP MODEL	METER MODEL	Flow Rate	ELECTRICAL POWER			POWER
			Current	Voltage(V)	Frequency	Nominal (Watt)
10307007	Not Available	9/18GPM	DC	12/24	\	420
10305629	Not Available	15GPM	DC	12	\	300
10305630	Not Available	15GPM	DC	24	\	300
10306604	15111201	18GPM	AC	120	60	370
10308204	15111201	22GPM	AC	120	60	450
10307008	15111201	9/18GPM	DC	12/24	\	420
10305631	15111201	15GPM	DC	12	\	300
10305632	15111201	15GPM	DC	24	\	300
10306605	Not Available	18GPM	AC	120	60	370
10308205	Not Available	22GPM	AC	120	60	450

## D. PRECAUTIONS

**During Diesel delivery** always wear oil resistant and always wash hands with water and soap at the end. **Always clean** at once oil stains to avoid slips and/or pollution.

**Use particular care** with the zones next to the controls.

**When cleaning**, and specially when removing dust or waste, always wear suitable clothes, if possible use aspirators only. Always use suitable clothes or protective devices. Never place hands or limbs under moving parts.

## E. SYSTEM DESCRIPTION

### Functional Description

The diesel transfer system are hydraulic machine tools which feed with a given capacity (volume) of fluid in the time unit, a collecting tank, sucking the liquid from an open surface feed tank; the allowed suction lift (geodetic suction lift  $H_{ga}$ ) is also a specific characteristic of the pump. The system is composed by complementary equipment, operating as whole to give a complete service:

- Diesel pump
- 2M suction hose with filter
- 4M delivery hose
- Dispensing nozzle

- 2" quick coupling

## MACHINE DESCRIPTION

The diesel transfer unit has been designed and built according to the following standards:

- Electric requirements: EN 60204-1 and EN 60529
- Mechanical requirements: EN 292-1 and EN 292-2; EN 55081-2, EN 55011C/A
- Other requirements 89/392 CEE

## F. ALLOWED AND FORBIDDEN USE

Diesel transfer unit has been designed and built for DIESEL TRANSFER ONLY from reservoirs, tanks and drums.

**It is strictly forbidden to employ it to transfer liquids of different kind as gasoline, explosives and corrosives (or flammable), alimentary liquids.**

**The machine isn't designed for employment in the explosive environment.**

**Operating the pump is forbidden to children and disabled person.**

**It is forbidden to employ the unit next to flammable liquids (gasoline, alcohol, etc.).**

**It is forbidden the employment in closed environments in presence of gasoline, LPG, methane fuelled vehicles.**

## G. TRANSPORT AND UNPACKING


Due to its weight and dimensions, the unit can easily be transported by hand. Control that the package is good conditions and verify that the unit isn't damaged. Each failure must be noticed in 10 days from receiving the machine.

For correct unpacking carefully follow these instructions:

1. Place the case on the ground following the indications on the package.
2. Carefully open the case, remove the machine and place it on the ground or on a steady surface.
3. Control that the machine and its accessories aren't damaged.
4. Firstly, connecting the pump and the flow meter by flange kit (provided in the carton), then install the nozzle holder to the bottom of the pump. Take out the elbow and screw it on the outlet of the flow meter. For details, please refer to "M Diagram"
5. Connect the coupling, see Fig. 1. Connecting Coupling 2 with the spout of the drum or tank. Joint Coupling 1 with the inlet of the pump. Install the suction hose on the thread of the Coupling 1. Then joint coupling 1 to coupling 2, tighten by screwing the screw.
6. Screw the delivery hose on the fitting of the flow meter and of the filling gun.

**NOTE: FOR ALL ABOVE CONNETION, SCREWED IT TIGHTLY WITHOUT ANY LEAKAGE!**

Fig. 1

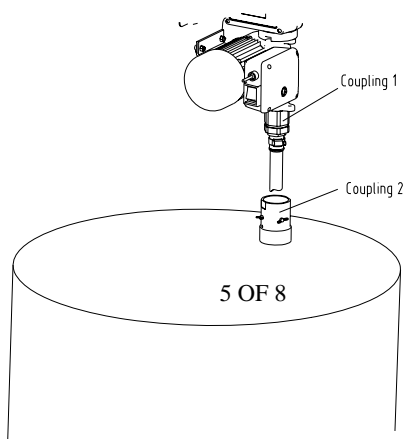

## H. USE AND STARTING

### STARTING

Once the hoses are sealed, the feeding cable is connected and the filling gun is in rest position, the machine can be started. After placing the hose into the tank and the gun into the filling hole, start the pump, gradually release the lever and start Diesel transfer. Once the filling is done release the control of the gun and switch the pump off. When the pump isn't in use disconnect it.

### FLOW METER

The flow meter shows how many litres of liquid were pumped by the unit. Be aware that this device is not suitable to measure products for resale.

The mechanical flow meters indicate the partial (resettable) and total (no reset function) of the litres pumped. Each time the instrument must be reset, turn the knob on the left of the unit until all zeroes are displayed.

### Calibration

The meter used in the pumping unit is calibrated at the factory. Calibration is recommended upon initial use, after disassembly or significant wear. Meter calibration can be easily changed with the procedure hereafter. The proving container should be at least 50 litres.

Procedure:

Fill container to a know volume

Turn the calibration screw

+Clockwise to increase the number of liters counted

-Counterclockwise to decrease the number of liters counted

### WARNINGS

1. The gunlock has been provided to make filling easier. It is forbidden to leave the gun unattended to avoid overflow.
2. Don't operate the machine if there is no liquid inside. Don't start the pump before connecting suction and delivery hoses.
3. Once the gun is closed switch the motor pump off as soon as possible. **THE PUMP HAS TO WORK IN BY-PASS CONDITION FOR SHORT PERIOD: MAXIMUM 3 MINUTES.**
4. In case of current losses the pump should be switched off and the plug disconnected.
5. It is strictly forbidden to use the pump with wet hands, barefooted or dipped in water.
6. In case of blackout switch the pump off and disconnect the plug to avoid unexpected starts with liquid overflow.
7. When transferring from open-air tanks, we suggest to place the machine as far as possible to avoid sprays and sudden dips which may cause serious damage.

## I. MAINTENANCE

Each kind of disassembly should always be carried out when the machine is stopped, the plug is disconnected and after emptying the pump and the flow meter. For a better operation control every three months that there isn't any kind of debris in the flow meter filter.

## J. OPERATIONAL PROBLEMS

ACCIDENTS	CAUSES	REMEDIES
The pump doesn't work	A) Jammed shaft B) No electric feeding	A) Disconnected the plug; unscrew on the pump, remove the pump body and clean it inside. Control that the shaft is now working correctly. Reassemble the pump. B) Control that the plug is correctly connected and that the socket is live.
The pump works doesn't deliver liquid.	A) The pump sucks air from the suction hose. B) Air inside the pump	A) Control the suction hose seal on the pump. Verify that the hose is completely immersed into the liquid and free from chokes. B) Control that the filter is clean.

## K. MECHANICAL RISKS

### 1. Mechanical parts subject to wear

The blades

The bearing

The rotor


These parts should be replaced with original spare parts by qualified personal only or in authorized service centres.

### 2. Risks due to extreme temperatures

Remember that a very low temperature can freeze the Diesel inside the pump. This situation can cause serious damage to the motor pump unit.

3. A very high temperature (about 45°C) may cause the plastic parts in the unit to expand. The unit should thus be placed in a well-ventilated place and protected from the sun.

## L. DIAGRAM & PRICE LIST

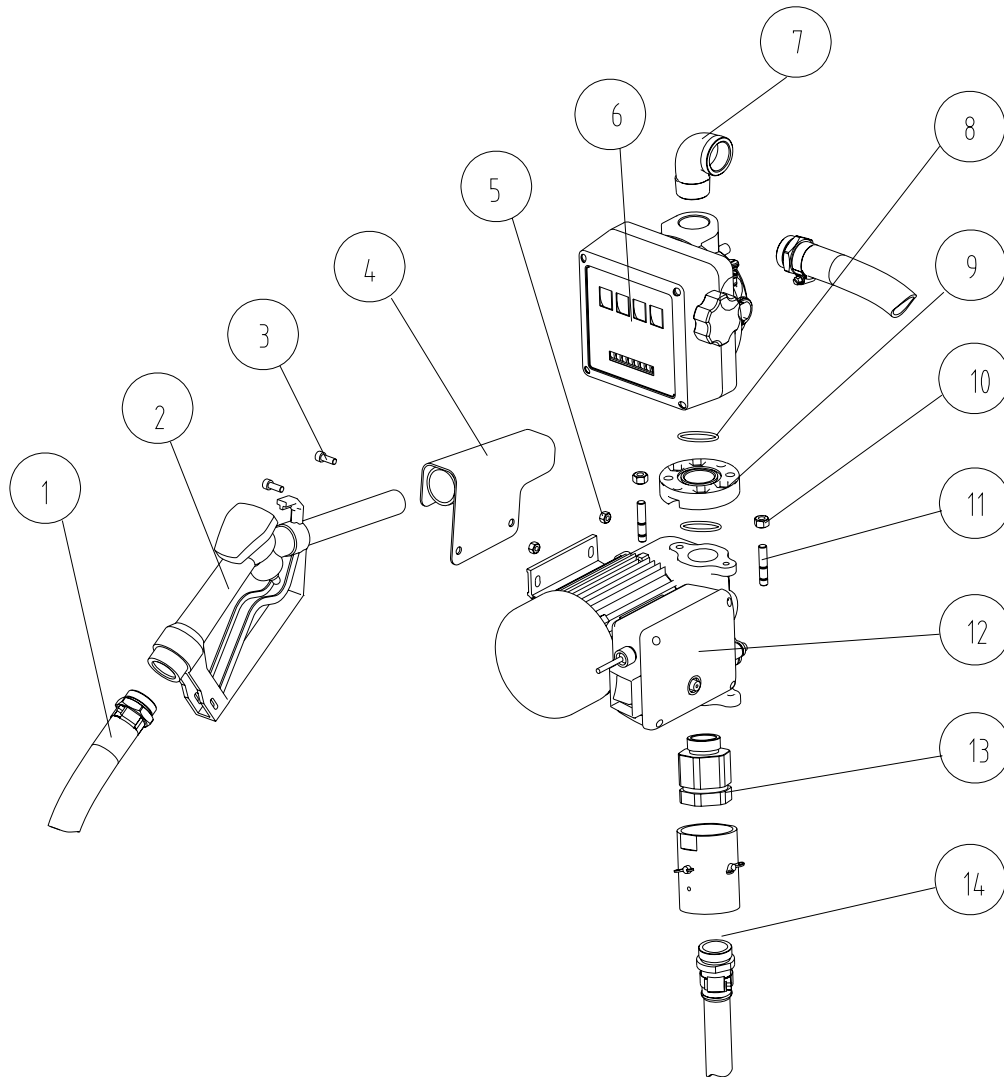

Part No.	Component description	Quantity	Part No.	Component description	Quantity
1	Outlet	1	8	O-ring	2
2	Nozzle	1	9	flange	1
3	Bolt M6	2	10	Nut M8	2
4	Nozzle base	1	11	Bolt M8	2
5	Nut M6	2	12	pump	1
6	Mechanical meter (Optional)	1	13	Quick Coupling	1
7	Elbow	1	14	Inlet	1